

Current Converter with Remote Indicator

Emco's Current Converter Unit (EE-608) along with the Remote Indicator (EE-609) makes one complete set. Current Converter Unit fits in the marshalling box whereas the Remote Indicators are used on RTCC Panel for remote indications.

Specifications

Current Converter Unit

Input	: PT100 Sensor 0 – 5 A Current Input
Indications	: 3-digit 7-seg dis for OTI 3-digit 7-seg dis for WTI
Temp. Range	: 0 ⁰ C - 150 ⁰ C
Resolution	: 1 ⁰ C
Accuracy	: ± 2 ⁰ C
Outputs	: Dual 4-20 mA for OTI Dual 4-20 mA for WTI
Supply	: 110 / 230 V AC or UPS, 10 W
Oper. Temp.	: 0 - 50 ⁰ C
Mounting	: Wall (62 (H) x 216 (W))
Dimensions	: 92 (H) x 196 (W) x 120 (D)
Enclosure	: MS Powder Coated
Weight	: 1 Kg. approx.

Repeater

Input	: 4-20 mA Input for ROTI 4-20 mA Input for RWTI
Indications	: 3-digit 7-seg dis for ROTI 3-digit 7-seg dis for RWTI
Temp. Range	: 0 ⁰ C - 150 ⁰ C
Resolution	: 1 ⁰ C
Accuracy	: ± 2 ⁰ C
Outputs	: -- --
Supply	: 95V – 260V AC/DC, 5W
Oper. Temp.	: 0 - 50 ⁰ C
Mounting	: Panel Cutout (92 x 92)
Dimensions	: 96 (W) x 96 (H) x 120 (D)
Enclosure	: ABS Box
Weight	: 0.5 Kg. approx.



CCU



Repeater

EMCO ELECTRONICS



Mumbai Office : 302, Vasan Udyog Bhavan, Senapati Bapat Marg, Opp. Phoenix Mill, Lower Parel (W), Mumbai-400013. Tel.: 022 - 2490 2283 / 2492 3183 Fax : 022 - 2495 1024

Email: office@emcoelectronics.org

Factory : Unit No. 13, Kedarnath, Tungareshwar Industrial Complex No. 1, Village Sativali, Vasai (E), Dist. Thane - 401 208. Tel.: 0250- 248 1783 Fax : 0250 - 248 1087

Email : mumbai@emcoelectronics.org

Bangalore Office : 15, Wood Street, (1st Floor) Richmond Road, Bangalore - 560 025

Tel.: 080 - 2557 0215 Fax : 080 - 2556 6066 Email : emcoblr@bgl.vsnl.net.in



Product Specifications are subject to change without any prior notice